

Troubleshooting

This is a strong and durable product that should give you many years of service. Should you experience a blockage, simply unscrew the Hoselink Accessory Connector and flush it out with water. The mesh filter will stop large particles in the water from entering the sprinkler. This can also be removed for cleaning if necessary.



MODEL: US5640-WG
Metal 9-Pattern Sprinkler

For more information visit

[hoselink.com](https://www.hoselink.com)

or call

(833) 216 4673

Cultivating **Connections**

 [youtube.com/hoselink](https://www.youtube.com/hoselink)

User Manual

MODEL: US5640-WG
Metal 9-Pattern Sprinkler



HOSELINK[®]

Kit Contents

- 1 x 9-Pattern Sprinkler
- 1 x Accessory Connector

With nine different spray patterns, our best-selling sprinkler has the right setting for you. Ideal for gardens of all shapes and sizes, the Hoselink 9-Pattern Sprinkler only waters where you want it, so you don't have to worry about wasting a drop of water.

Assembly Instructions

STEP 1 Connect to Water Supply

Connect to a water supply by attaching your Hoselink-fitted hose end to the Accessory Connector included with the sprinkler.

STEP 2 Choose Spray setting

Choose the desired spray setting by turning the black pattern selector dial until it clicks into place on your chosen setting. The selected pattern will be the one in front of the brass water inlet.

STEP 3 Turn on water

Turn on water source.

Settings

There are nine spray settings to choose from depending on your water application. Some settings may perform better than others according to the supplied water pressure. For each setting, water is emitted from the actual function selected, except for the Soaker and Round Outer Rim functions as outlined below.

1 Soaker

This is the only function that utilises the centre fan. Water is emitted from the holes under the fan blades. Please note, the centre fan requires strong water pressure to spin.

2 Rounded Square

Sprays in a square-like shape with rounded corners.

3 Square

Sprays in a square shape.

4 Round Outer Rim

Sprays gentle jets from the holes around the outside of the pattern selector dial.

5 Arc

Sprays in a rectangular arc in front of the sprinkler.

6 Narrow Rectangle

Sprays in a narrow band to either side of the sprinkler.

7 Classic Round

Sprays in a regular circular shape.

8 Half Moon

Sprays in a half circle in front of the sprinkler.

9 Wide Rectangle

Sprays in a wide band to either side of the sprinkler.

